



! Attention !

Do NOT paint the paddlewheel, paddlewheel channel or in the axle insert hole on the outside wall of the insert. Paint in the paddlewheel channel, paddlewheel or on the paddlewheel axle will impact the speed reporting function of the instrument.

The use of the provided blanking plug while the boat is stationary for a length of time is recommended.

Never use ketone-based paint since ketones can attack many plastics possibly damaging the sensor. It is easier to brush on anti-fouling coating before installation but allow sufficient drying time before installation.

Re-coat every 6 months or at the beginning of each boating season.

Only coat the following surfaces:

- Outside wall of the insert below the lower O-ring
(Avoid painting over the axle insert hole for the paddlewheel shaft)
- Exposed end of the insert (DST Model Only)
- Exterior flange of the housing
- Bore of the housing up 30mm (1-1/4")
- Blanking plug below the lower O-ring including the exposed end

! Attention !

Do NOT paint the paddlewheel, paddlewheel channel or in the axle insert hole on the outside wall of the insert. Paint in the paddlewheel channel, paddlewheel or on the paddlewheel axle will impact the speed reporting function of the instrument.

The use of the provided blanking plug while the boat is stationary for a length of time is recommended.

Never use ketone-based paint since ketones can attack many plastics possibly damaging the sensor. It is easier to brush on anti-fouling coating before installation but allow sufficient drying time before installation.

Re-coat every 6 months or at the beginning of each boating season.

Only coat the following surfaces:

- Outside wall of the insert below the lower O-ring
(Avoid painting over the axle insert hole for the paddlewheel shaft)
- Exposed end of the insert (DST Model Only)
- Exterior flange of the housing
- Bore of the housing up 30mm (1-1/4")
- Blanking plug below the lower O-ring including the exposed end